




SANI-MATIC®

Tunnel Wash: Reliable, High-Volume Cleaning of Trays, Pans and Totes.



The Sani-Matic Tunnel Wash is an automated tunnel washer designed to clean a wide variety of high-volume items such as pans, totes, pails, buckets and trays. The basic design includes detergent and final rinse zones. Pre-rinse and recirculated rinse zones may be provided for heavy product residues or high-capacity requirements.



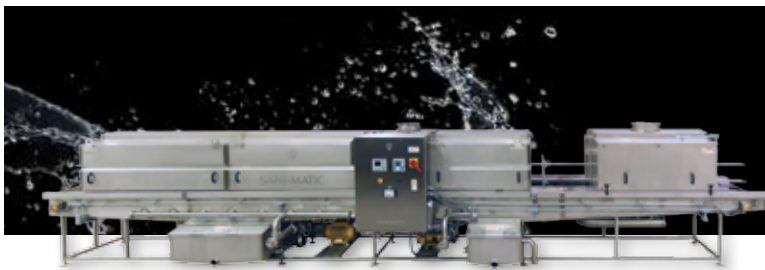

The **Sani-Matic Tunnel Wash** is simple and efficient to reduce labor costs, minimize chemical use, and lower water and utility costs.

Advantages

- **Complete Clean.** High-impact, adjustable spray nozzles thoroughly clean a process item's interior and exterior.
- **Repeatable Results.** Consistent, repeatable results from a controlled process.
- **Increased Productivity.** Conveyorized and optional exit blow-off systems provide quick turnaround times.
- **Savings.** Reduces labor and utility costs and controls chemical use.
- **Safety.** Minimizes operator exposure to high temperatures and strong concentrations. Safe and easy to load and unload.



We mix our industry-specific expertise with the perfect combination of Time, Action, Chemical and Temperature to deliver the best solution for your cleaning challenge.

Applications

Trays



Pallets



Totes



Features

Standard

- 2-, 3-, and 4-section configurable design
- Stainless steel construction
- Rollaway covers for easy access to sprays, instruments and conveyor
- Variable-speed, gear-driven conveyor with torque limiter
- High-impact, 360° adjustable spray nozzles
- Two-stage solution straining system for heavy soil capture in the sump and fine particulate capture in the pump discharge
- Pre-piped centrifugal supply pump(s)
- Automatic temperature and water level controls with alarm and shutdown
- Direct steam injection heating system
- PLC controls with control interface and indicator lights
- Automatic final rinse control
- Custom spray manifold/nozzle configurations
- Custom guide rail container restraint system

Optional

- Automatic detergent injections and concentration control
- Automatic sanitizer injection system
- Exit blow-off system
- Natural gas or indirect steam heating coils
- Conveyorized strainer scraper
- Final rinse conservation valve assembly
- Exhaust fan
- Stacker/de-stacker
- Single- or dual-lane configuration
- Adjustable guide bars
- Sani-Matic Start-up Services

High-impact, 360° adjustable spray nozzles provide complete cleaning coverage of a process item's internal and external surface area.



Exit blow-off system


How it Works ○

Three-section washers (detergent wash, recirculated rinse and final rinse) are the most commonly requested designs. For heavy residues, a pre-rinse section may be required.

Operational overview of 4-section washer with exit blow-off system:

- PR** Soiled product containers are conveyed through the Pre-Rinse (PR) section to loosen and remove heavy residues.
- DW** The Detergent Wash (DW) section loosens and sprays off the remaining residue.
- RR** The Recirculated Rinse (RR) removes most of the residual detergent solutions from the containers and overflows to Pre-Rinse, if available.
- FR** The Fresh Water Rinse (FR) removes the remaining detergent film and overflows to Recirculated Rinse (RR).
- BL** Optional Exit Blow-Off System (BL).

Note: All washers are designed to conserve water.

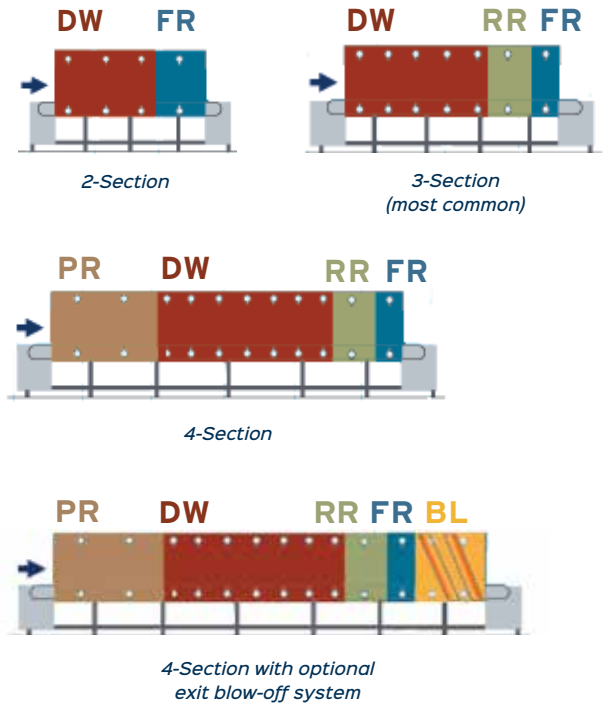

Pallet Wash ○

Improve quality control and sanitary product handling with a Sani-Matic Pallet Wash. The Pallet Wash is available in either a horizontal or vertical design and operates similar to the Tunnel Wash with the same standard features and options.



Associated Material Handling ○

Integrated material handling may be added to provide synchronized stacking and de-stacking of totes to maximize cleaning and handling efficiencies.



Cleaning Confidence.

Repeatable results you can count on every time you clean your process parts and equipment.
That's Cleaning Confidence from Sani-Matic.



SANI-MATIC®

sanimatic.com

Distributed by:

MGNewell

Greensboro Division
301 Citation Court
Greensboro, NC 27409
336-393-0100

Louisville Division
4400 Bishop Lane, Suite 112
Louisville, KY 40218
502-459-7475

Nashville Division
330 Free Hill Rd, Suite B
Hendersonville, TN 37075
615-822-3030

sales@mgnewell.com
www.mgnewell.com